



# Mitsubishi Diamondpoint NXM76LCD Speaker Replacement

Written By: Padraic Hoselton








## TOOLS:

- [Phillips #2 Screwdriver](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
  - [5mm Nut Driver](#) (1)
-

## Step 1 — Removing the stand.

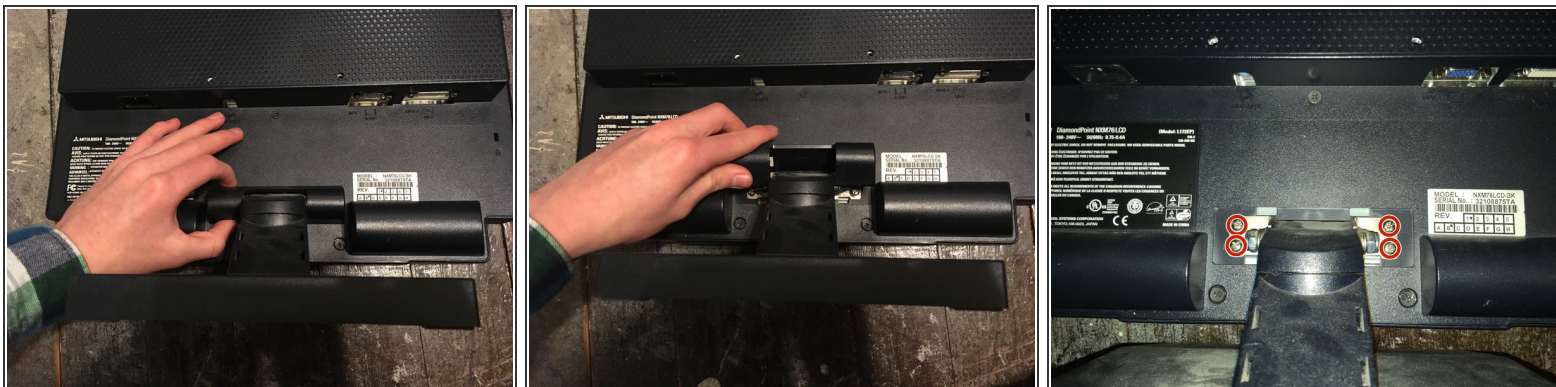

- Lift the black cover off.
- Remove all 4 Phillips #2 screws.

## Step 2 — Remove the 5 screws



- Remove the two 24mm Phillips #2 screws.
- Remove the three 8mm Phillips #2 screws.





### Step 3 — Remove the back panel



- Lift the back and pry the back off.

**i** The panel is held in with clips on the side. It needs a lot of force to take it off.

### Step 4 — Remove the four screws

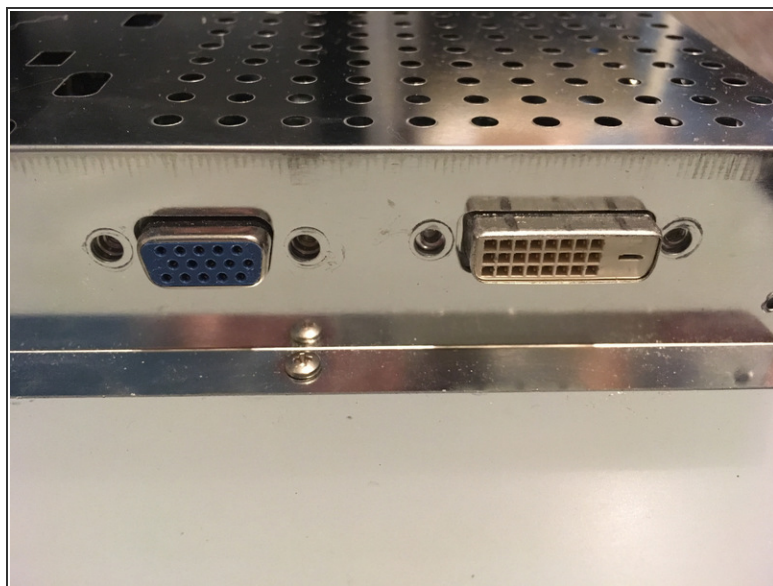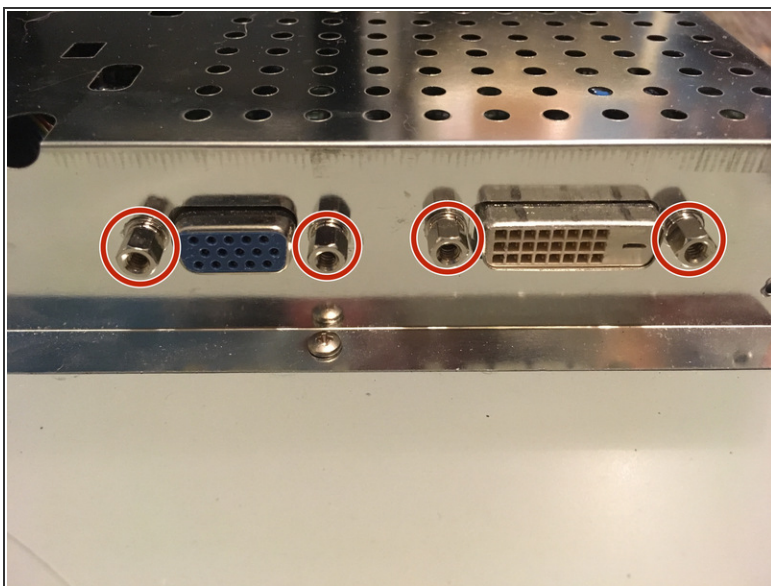

- Remove the four 5mm nut screws.




## Step 5



- Remove the seven Phillips #1 screws.


## Step 6 — Remove the front board

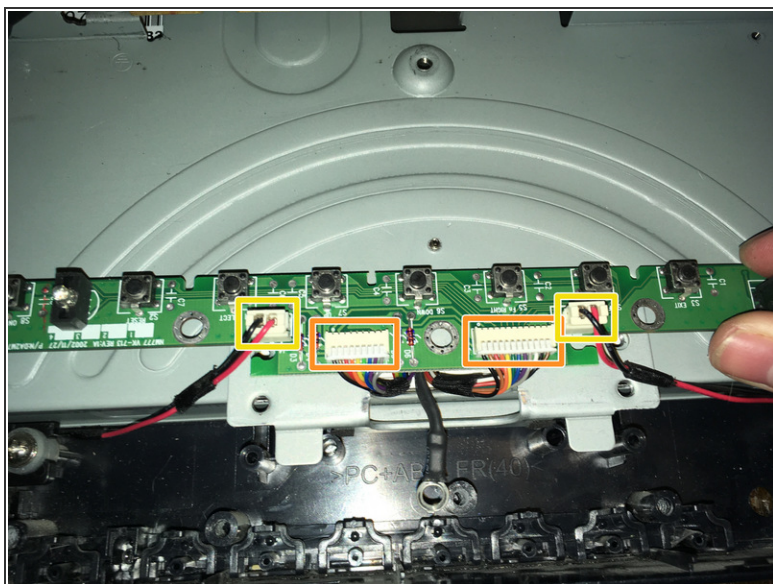

- Remove the three Phillips #2 screws.
- Remove the two data/power cables.
- Remove the two speaker cables.




## Step 7

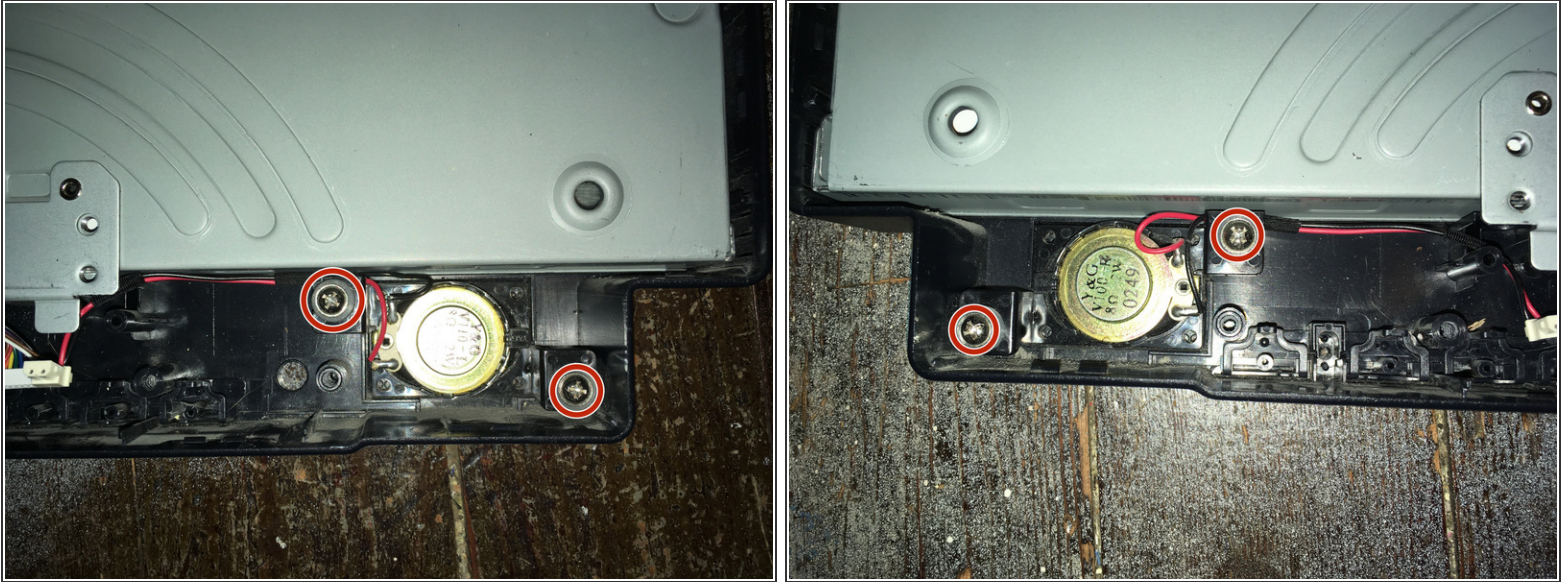

- Remove the Phillips #2 screws from the speaker(s).

## Step 8

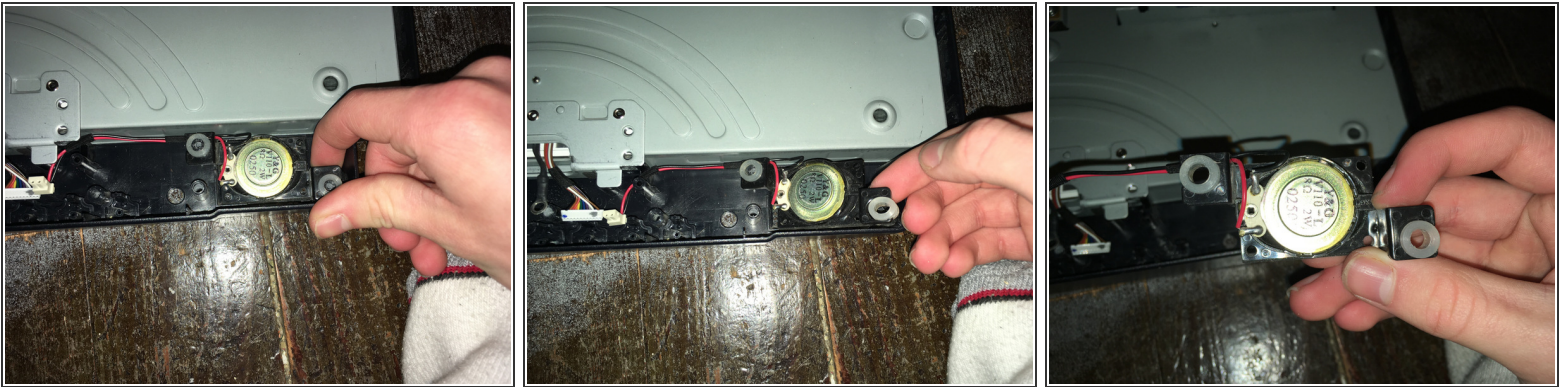

- Pull the speaker off the slots.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-12-03 10:34:46 PM.